

England's Stove Works, Inc.

*Pellet Stoves
Corn Stoves
Gas Stoves
Wood Stoves*

P.O. Box 206 Monroe, VA 24574 www.englishstoves.com Phone: (800) 516-3636 Fax: (434) 929-4810

Corn Sifter Operation Instructions

**WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.
ALWAYS FOLLOW ALL CODES.**

Congratulations on your purchase of our model AC-CS Corn Sifter. Its sturdy construction should give you a lifetime of dependable service. The sifter is designed to be simple to operate:

1. *Use Caution* when moving the sifter, as it is somewhat heavy due to the sturdy, metal construction; the sifter has a rod-like “grab handle” built into the top of it. Place the sifter on top of two buckets (not included), as shown in Ill. 1. The bottom chute should be over one bucket (the bucket on the left in the picture), and the side chute should be over the remaining bucket (the bucket shown on the right).
2. Slowly pour the corn through the sifter, as shown in Ill. 1. Large stalks and debris will be caught at the top, and useless “fines” will drop into the waste bucket, below the bottom chute. Good fuel will flow out of the side chute (see Ill. 2 – the waste bucket is shown on the left, and the good fuel is in the bucket on the right). The good fuel can then be poured directly from its bucket into your stove’s hopper, and the fines and husks (or other debris) may be discarded.



Ill. 1



Ill. 2

Technical Support: (800) 245-6489
Web Site: www.englishstoves.com