

England's Stove Works, Inc.

Pellet Stoves
Corn Stoves
Gas Stoves
Wood Stoves

P.O. Box 206 Monroe, VA 24574 www.englishstoves.com Phone: (800) 516-3636 Fax: (434) 929-4810

Installing ceramic fiber board And/or replacing burner tube(s) In units with "13" in model number

**WARNING: STOVE MUST BE OUT (NO FIRE), AND COOLED DOWN BEFORE PROCEEDING.
ALWAYS FOLLOW ALL CODES.**


1. Open the front door of the stove.
2. Locate the three burner tubes inside the stove, at the top of the firebox (Ill. 1). Locate the 5/16" screws at the left-hand end of the tubes (Ill. 1). Remove only the screws for the *front and middle* burner tubes.

3. Once the screws for the front and middle tubes are removed, slide each tube to the right and let it drop down (Ill. 2). Then slide each tube to the left to remove it from the stove.

IMPORTANT: Take note of which tube belongs in each position (i.e. front and middle), as each tube is different.

4. Remove the ceramic fiber board from the stove.
5. Install the new fiber board by placing it on top of the rear tube (Ill. 2). Reinstall the middle burner tube (be sure to install the tube that was originally in the middle position, refer to the diagram on the rear of this sheet if necessary). Lastly, reinstall the front tube.

NOTE: If you are only replacing burner tubes (not the fiber board), refer to Step 2 for instructions on removing whichever tube/tubes you are replacing.

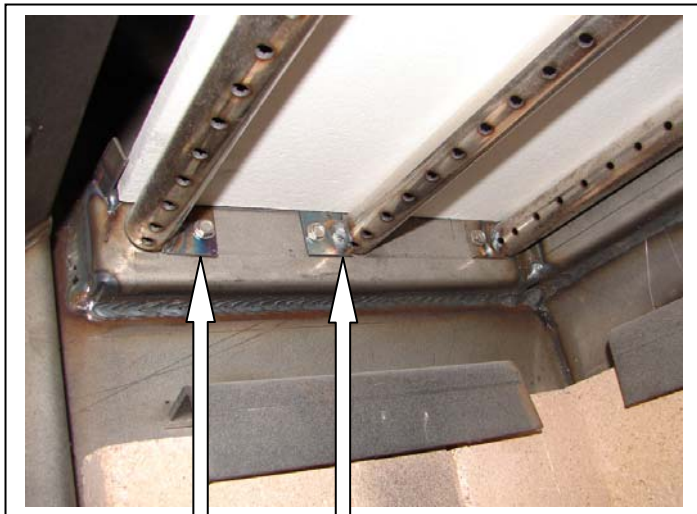


Remove only the screws for the front and middle tubes
Ill. 1



Ill. 2

(Burner tube placement diagram is on rear of this sheet)

Front (Door Side)
 ←
of Unit

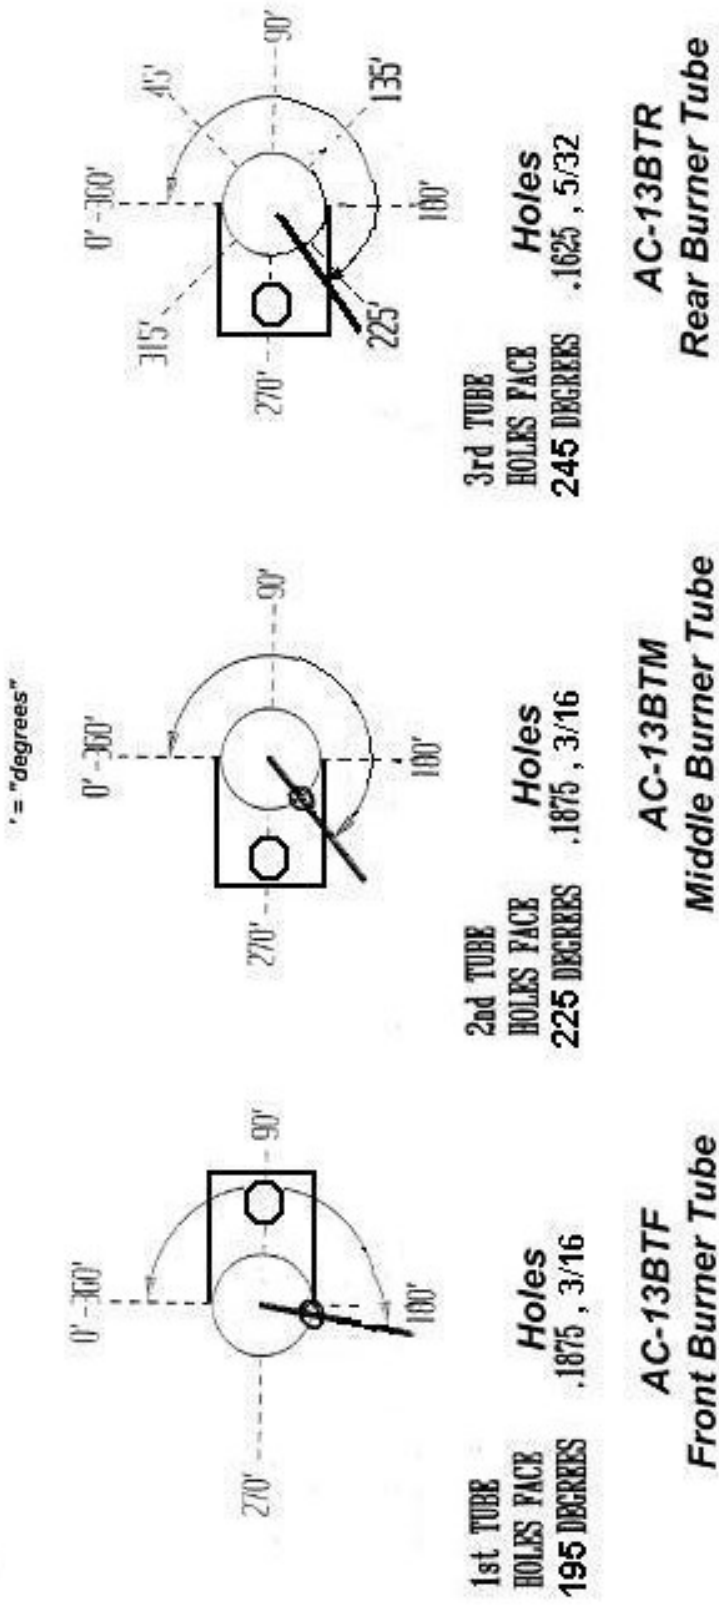

(Side View of Tubes)

Placement of Stainless Steel Burner Tubes for all 13-NC, 50-SNC13 and 50-TNC13 (freestanding and insert) stove models.