

England's Stove Works, Inc.

*Pellet Stoves
Corn Stoves
Gas Stoves
Wood Stoves*

P.O. Box 206 Monroe, VA 24574 www.englishstoves.com Phone: (800) 516-3636 Fax: (434) 929-4810

Window Trim Installation

WARNING: STOVE MUST BE OUT (NO FIRE), AND COOLED DOWN BEFORE PROCEEDING.


Window trim can be attached by using the provided “half moon” spring clip(s) and some high temperature silicone (optional, silicone is *not* included). Insert the tee end of the spring clip into the channel on the edge of the trim (Ill. 3) – then, turn the clip and set the other end of the clip into the channel (Ill. 4). The spring clip will hold well if it is placed on the top edge of the trim before placing the trim in the window of the stove. Place the top edge with the clip into the window opening, then push the bottom edge of the trim flush with the window. We also suggest that high temperature silicone (not included) be used on the corners, to ensure the trim will stay in place (Ill. 5).



Window Trim
Ill. 1




Half moon
spring clip
Ill. 2

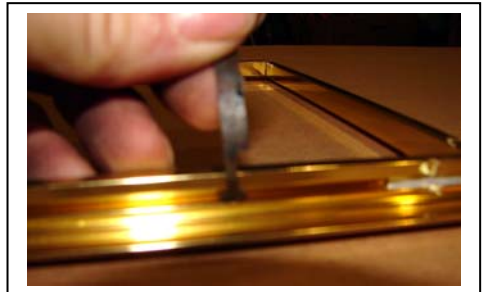

Installing clip
Ill. 3



The raised portion of the spring
clip should be facing the door
of the stove
Ill. 4

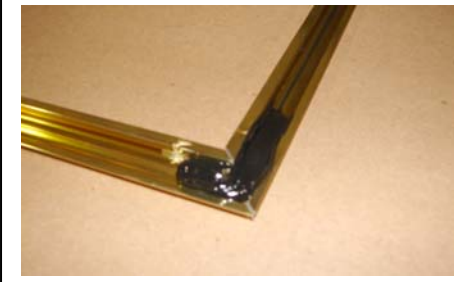

Optional -
Silicone on all
four corners
Ill. 5



Finished on stove
Ill. 6

ALWAYS FOLLOW ALL CODES